


## INSTALLATION INSTRUCTIONS FOR L2717 FOR USE WITH HALO TRACK SYSTEMS ONLY



### TO ADJUST HALO-2 SERIES LAMPHOLDER

Halo-2 Lampholders can be used with Halo Miniature or Halo-2 Power-Trac systems. An adjustable contact allows you to select the circuit position. Use a narrow blade screwdriver, as shown, to adjust the contact. Lift or lower the contact until it touches the plastic stop of the contact assembly. For circuit #1 move contact to the down position. For circuit #2 move contact to the up position. (Figure 1)

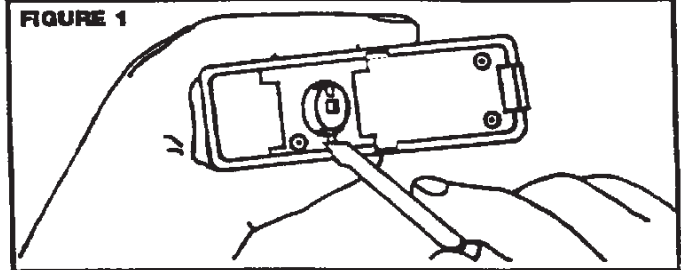

### TO USE HALO-2 LAMPHOLDER WITH MINIATURE POWER-TRAC

When using Halo-2 Lampholder with the Miniature Power-Trac System (L650, L651, L652, L653) adjustable contact must be in circuit #1 (DOWN) position. (Figure 2)

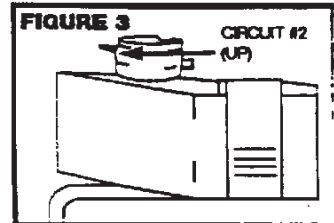
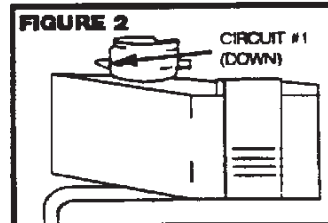


### TO USE HALO-2 LAMPHOLDER WITH HALO-2 POWER TRAC

When using Halo-2 Lampholder with the Halo-2 Power-Trac System (L640, L641, L642, L643) adjust the contact position of each lampholder to the desired circuit—circuit #1 (DOWN) or to circuit #2 (UP). (Figure 2,3)


### TO INSTALL LAMPHOLDER

Hold lampholder by the mounting adapter. Insert contact head into Halo Power-Trac. Twist mounting adapter approximately ¼ turn (90°) until mounting sleeve tab locks into Power-Trac opening. (Figure 4)

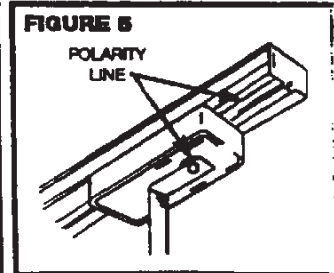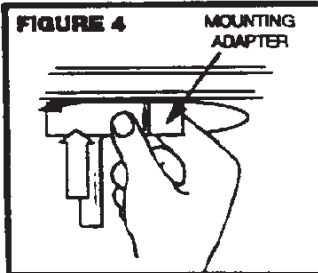

### NOTE

Forcing mounting adapter in wrong direction may damage the contact assembly. If mounting adapter will not turn easily, twist adapter in opposite direction. Polarity line on adapter must align with polarity line on Power-Trac for proper installation. (Figure 5)

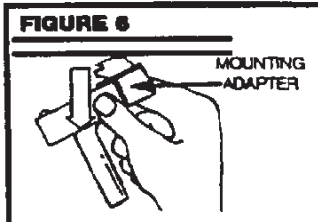

### TO REMOVE LAMPHOLDER

Slide latch down until latch is free of track channel opening. Twist mounting adapter ¼ turn (90°) until contact head is free and remove lampholder from track. (Figure 6)

## RELAMPING INSTRUCTIONS FOR L2717

**WARNING** Before working on Power-Trac fixture, be sure to turn off AC power or remove fixture from Trac.

**STEP 1** Allow unit to cool and then remove from trac. (Figure 1)

**STEP 2** Remove lamp from Gimbal Ring.

**STEP 3** Unplug lamp by pulling straight out. DO NOT TWIST! (Figure 2) DO NOT TOUCH THE BULB INSIDE THE LAMP REFLECTOR.

**STEP 4** Place lamp back in Gimbal Ring.

**CAUTION** Do not operate without Lens in place.

### LOW VOLTAGE CAUTIONS

#### Dimming

Dimming quartz halogen lamps (MR16) may reduce lamp life.

Low voltage lampholders with solid-state or magnetic transformers require proper dimming equipment. An improper dimmer may cause damage to the transformer and shorten lamp life. Consult factory for dimmer recommendations.

Some sound may be emitted by the transformer and/or the dimmer in the dimmed mode.

#### Installation

Solid state low voltage lampholders should not be installed in such a manner as to entrap excessive ambient heat around the fixture (such as enclosed display windows, showcases, alcoves, recessed covers, etc.).

#### Lamps

Some 12V MR16 lamps are not compatible with Halo Power-Trac lampholders

Consult your local Halo representative for further information on dimming, installation or lamp compatibility.

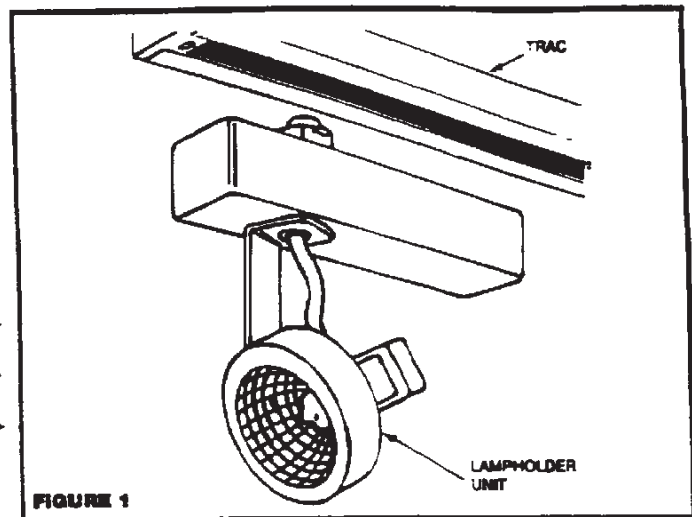


FIGURE 1

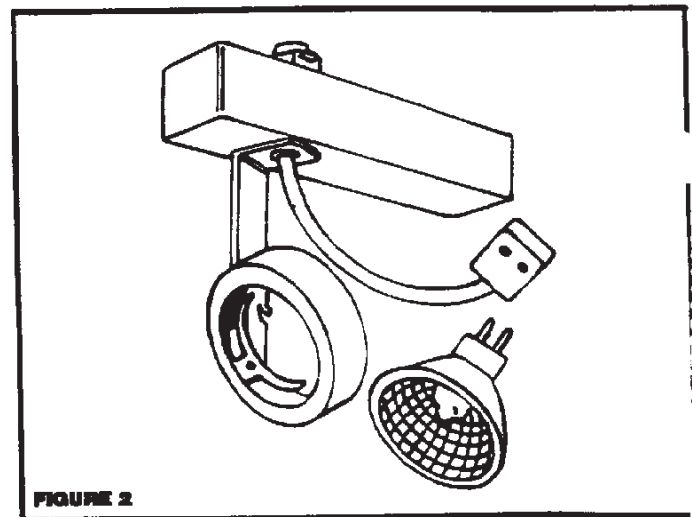


FIGURE 2